

Hitachi BIOS:

- 1) Press with three fingers the screen on the bottom left, upper left and upper right corner.
- 2) Press in the bottom middle the OFFLINE button.
- 3) Press on the **MAIN MENU** button **1** for **INITIALIZE**
- 4) Press **1** for **SYSTEM ENVIRONMENT SETUP**
- 5) Press **1** for **SYSTEM SETUP**
 - a) STAND BY MODE TIME (0-255) [0] MINUTE
 - b) START TIME (0-255) [2] SECOND
 - c) TOUCH BUZZER SOUND ON
 - d) BUZZER TERMINAL OUTPUT ON
 - e) PASSWORD (0-9999) [0]
 - f) DATE TYPE OF SCREEN NO. BIN
- 6) Press **SET** to save setting
- 7) Press **2** for **SYSTEM AREA SETUP** (yellow = active, black = not active)
 - a) CURRENT SCREEN NO. active
 - b) ERROR STATUS active
 - c) CLOCK DATA active
 - d) STATUS active
 - e) RESERVED active
 - f) CHANGE SCREEN NO. active
 - g) DISPLAY ON/OFF not active
 - h) CLOCK DATA not active
 - i) CONTROL not active
 - j) RESERVED not active
 - k) WINDOW CONTROL not active
 - l) WINDOW REG. NO. not active
 - m) WINDOW LOCATION not active
- 8) Press **CONFIRM** to save setting
- 9) Press **3** for **GLOBAL WINDOW SETUP**
 - a) GLOBAL WINDOW DO NOT USE
- 10) Press **SET** to save setting
- 11) Press **4** for **CHARACTER STRING DATA SETUP**
 - a) CHARACTER STRING DATA MODE [1]
- 12) Press **SET** to save setting
- 13) Press on the **INITIALIZE** frame
- 14) Press **2** for **SET UP I/O**
 - a) COMMUNICATION RATE 19200
 - b) DATA LENGTH 7
 - c) STOP BIT 1
 - d) PARITY EVEN
 - e) CONTROL ER-CNTRL
 - f) COMMUNICATION FORMAT RS232C
- 15) Press **SET** to save setting
- 16) Press **2** for **SET UP PRINTER**
 - a) PRINTER TYPE NEC PR SERIES

